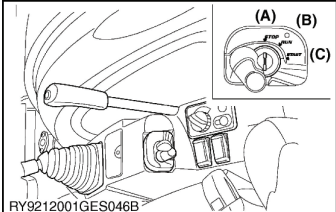
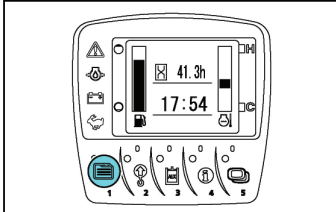
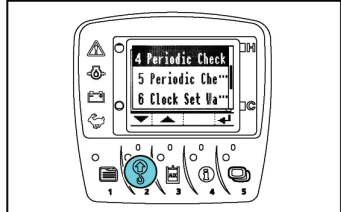
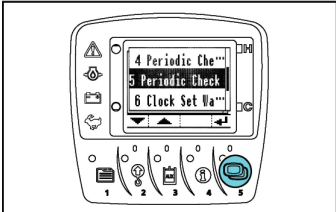
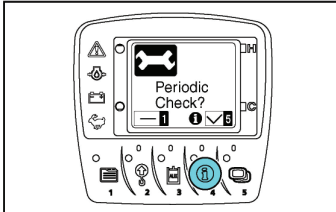
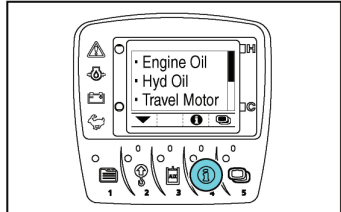
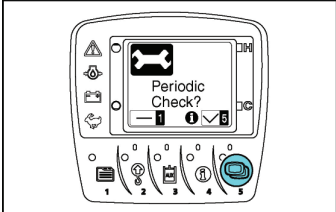
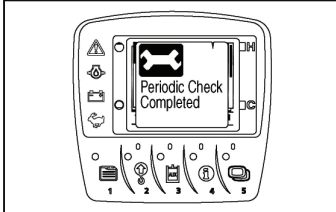
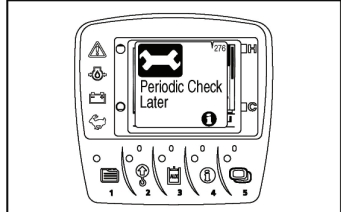
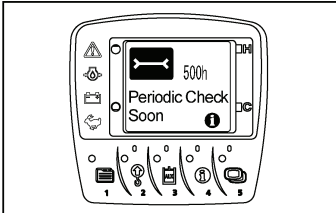
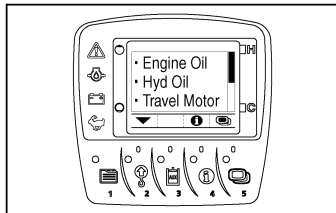


(3) Periodical-check-item Confirmation and Operation after the Periodical Check Execution

<p>[Operation 1] Turn the starter key to [RUN] position.</p>  <p>RY9212001GES046B (A)STOP (B)RUN (C)START</p>	<p>[Operation 2] Press SW1 (user setting).</p> 	<p>[Operation 3] Press SW2 and select "Periodical check".</p> 
<p>[Operation 4] Select "Periodical check" and press SW5.</p> 	<p>[Operation 5] At the time of confirming the check items, press SW4.</p> 	<p>[Operation 6] Confirm the displayed maintenance items, press SW4 again, and the screen will return to the original image.</p> 
<p>[Operation 7] After completion of the periodical check, press SW5.</p> 	<p>[Periodical check completed]</p> 	<p>※ Pressing SW5 except during the periodical check time will display the following image.</p> 

RY9212032ELS005A

In the case of display of the periodical check notices on the meter console.

<p>[Operation 1] At 10 hours before the periodical check, the following image will be displayed. When the check items need to be confirmed, press SW4.</p> 	<p>[Operation 2] Execute the maintenance work indicated in the display.</p> 
---	---

RY9212032ELS006A